


Fig. 1
(Prior Art)

2/7

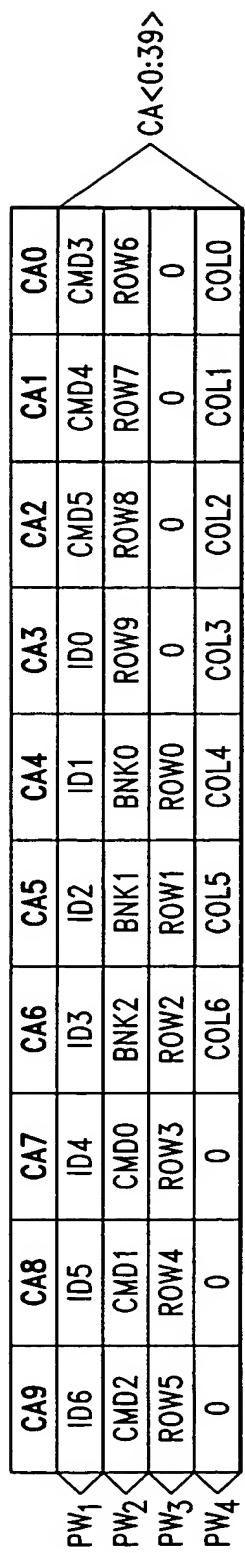

ID6-ID0 = DEVICE ID VALUE
CMD5-CMD0 = COMMAND CODE
BNK2-BNK0 = BANK ADDRESS

ROW9-ROW0 = ROW ADDRESS
COL6-COL0 = COLUMN ADDRESS
0 = UNUSED

Fig. 2
(Prior Art)

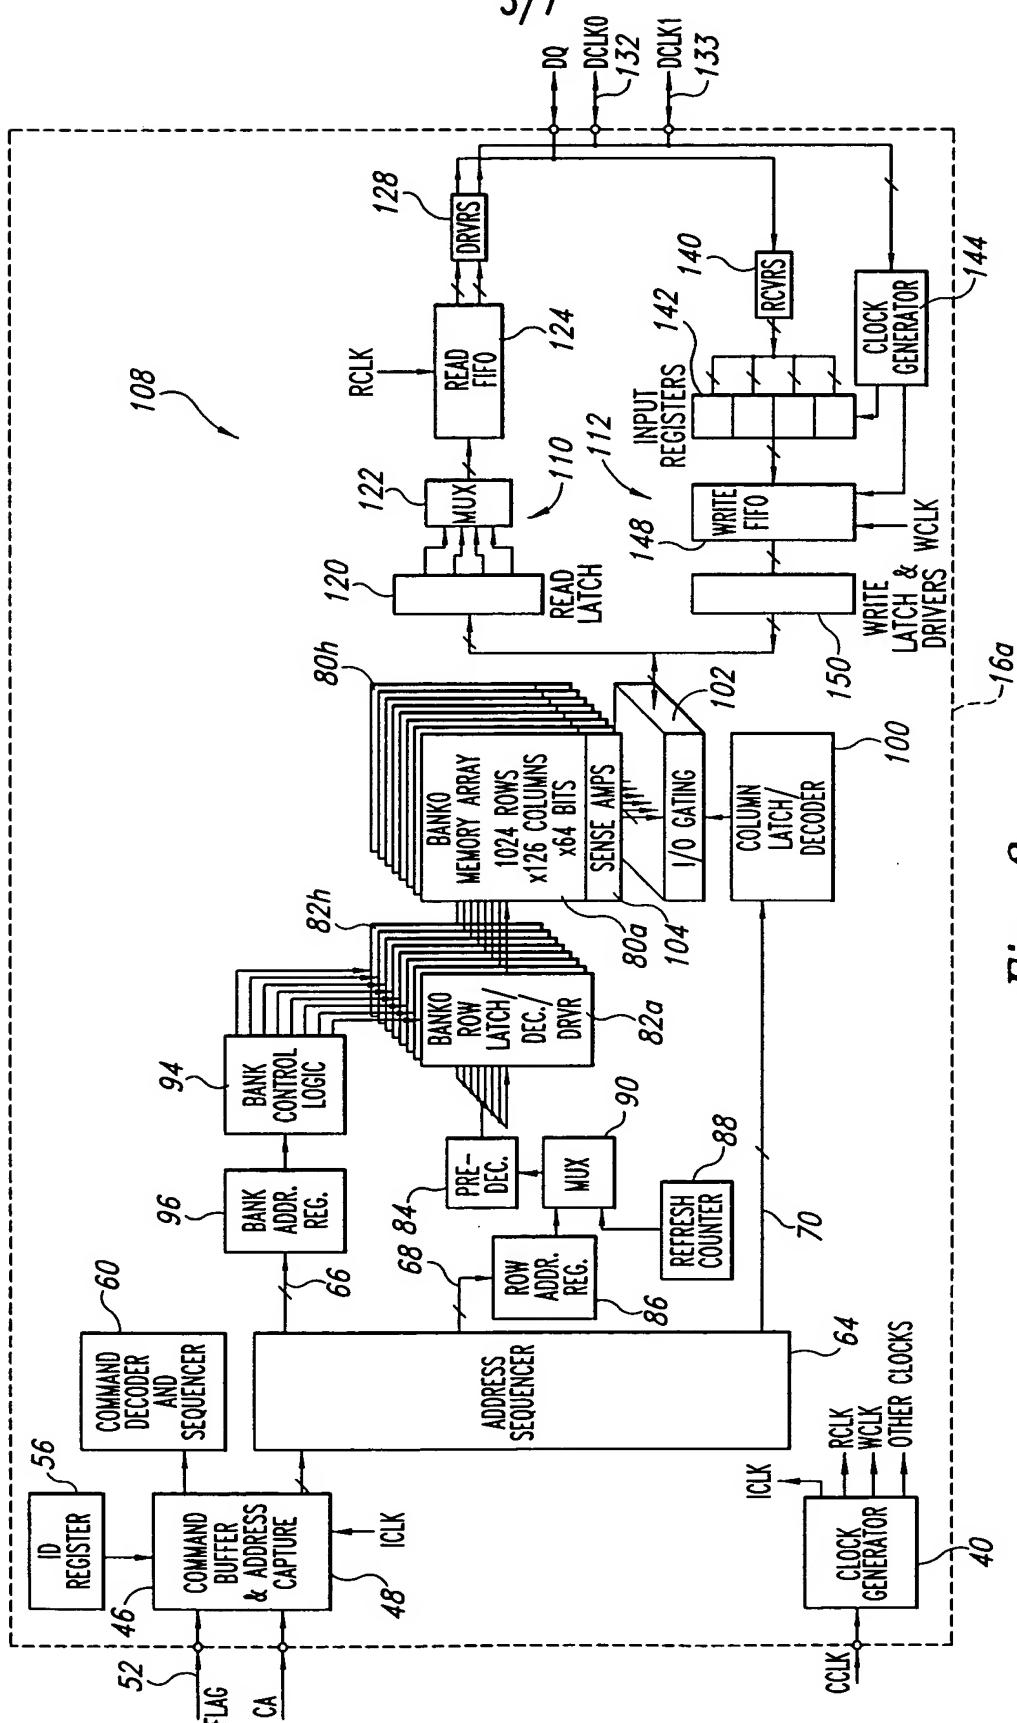
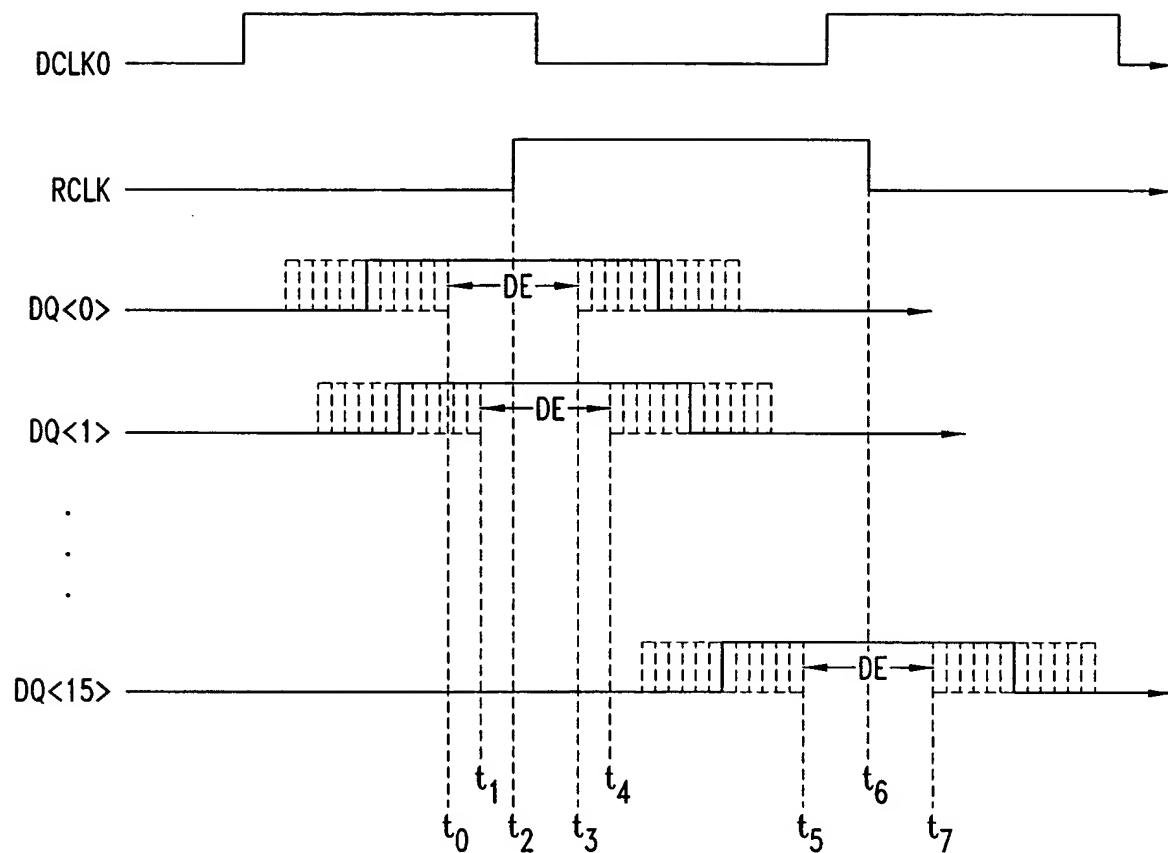


Fig. 3
(Prior Art)

4/7



*Fig. 4
(Prior Art)*

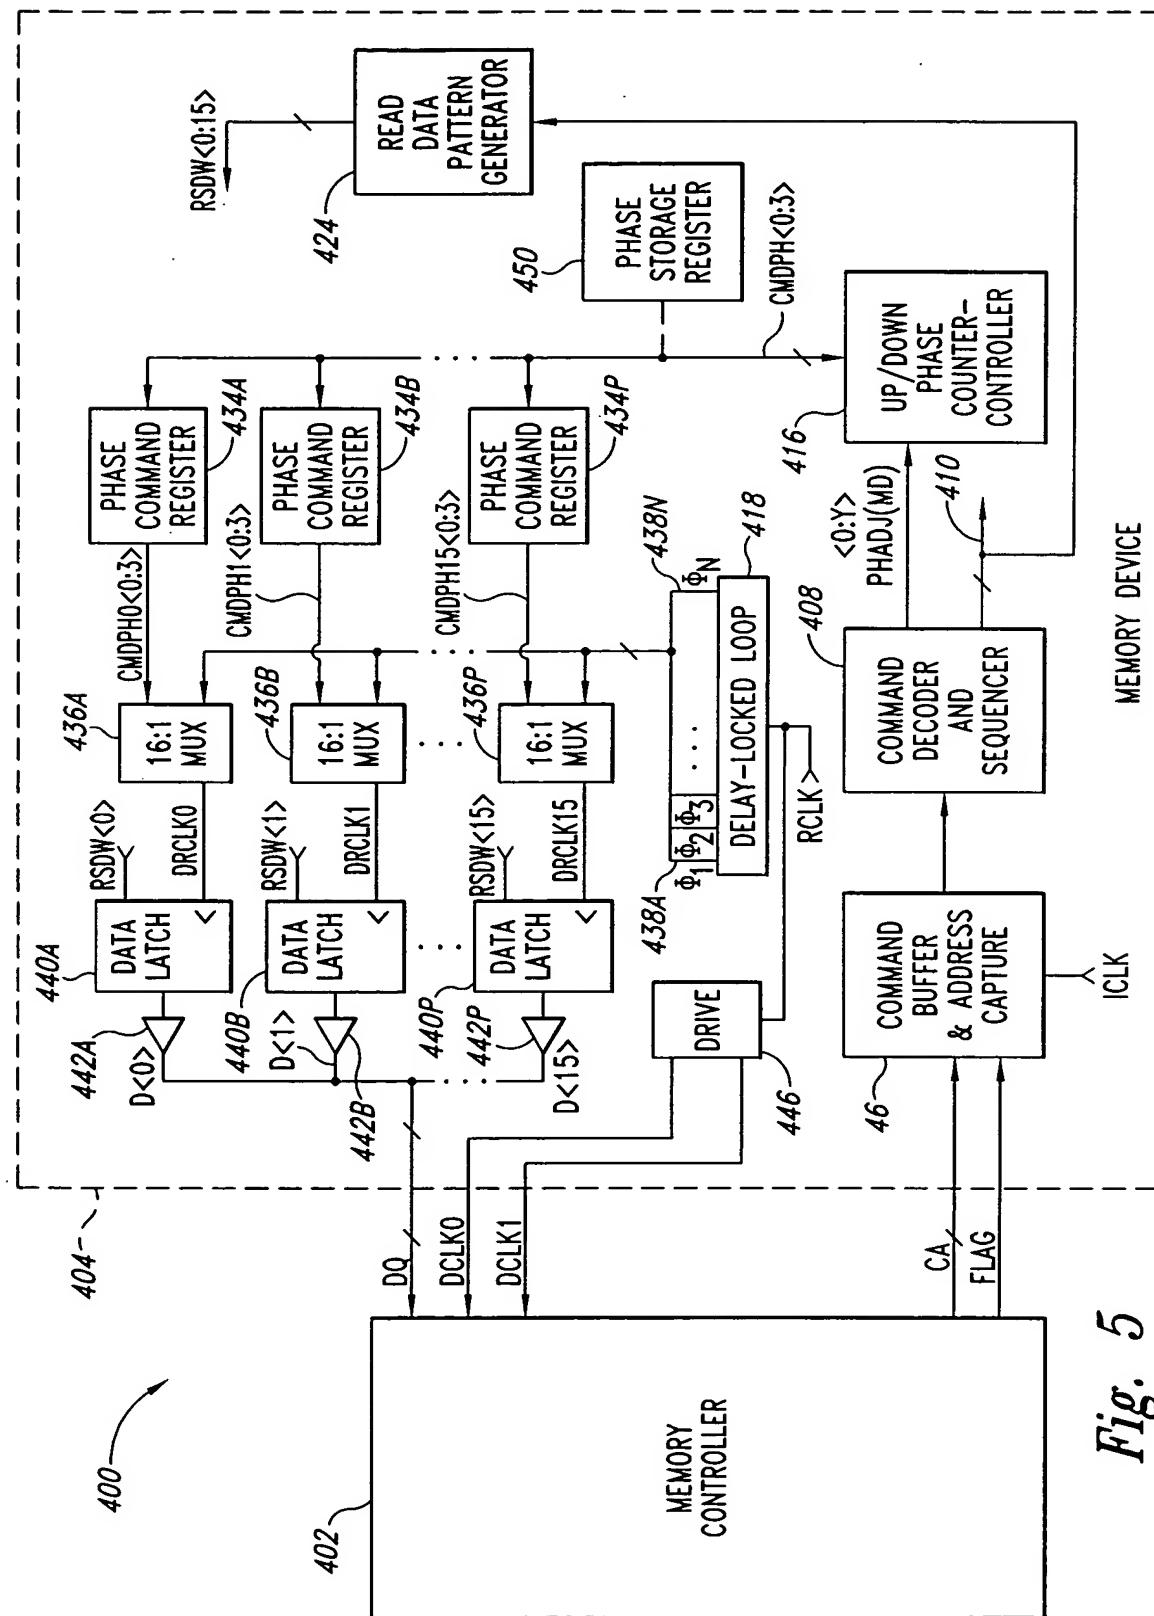


Fig. 5

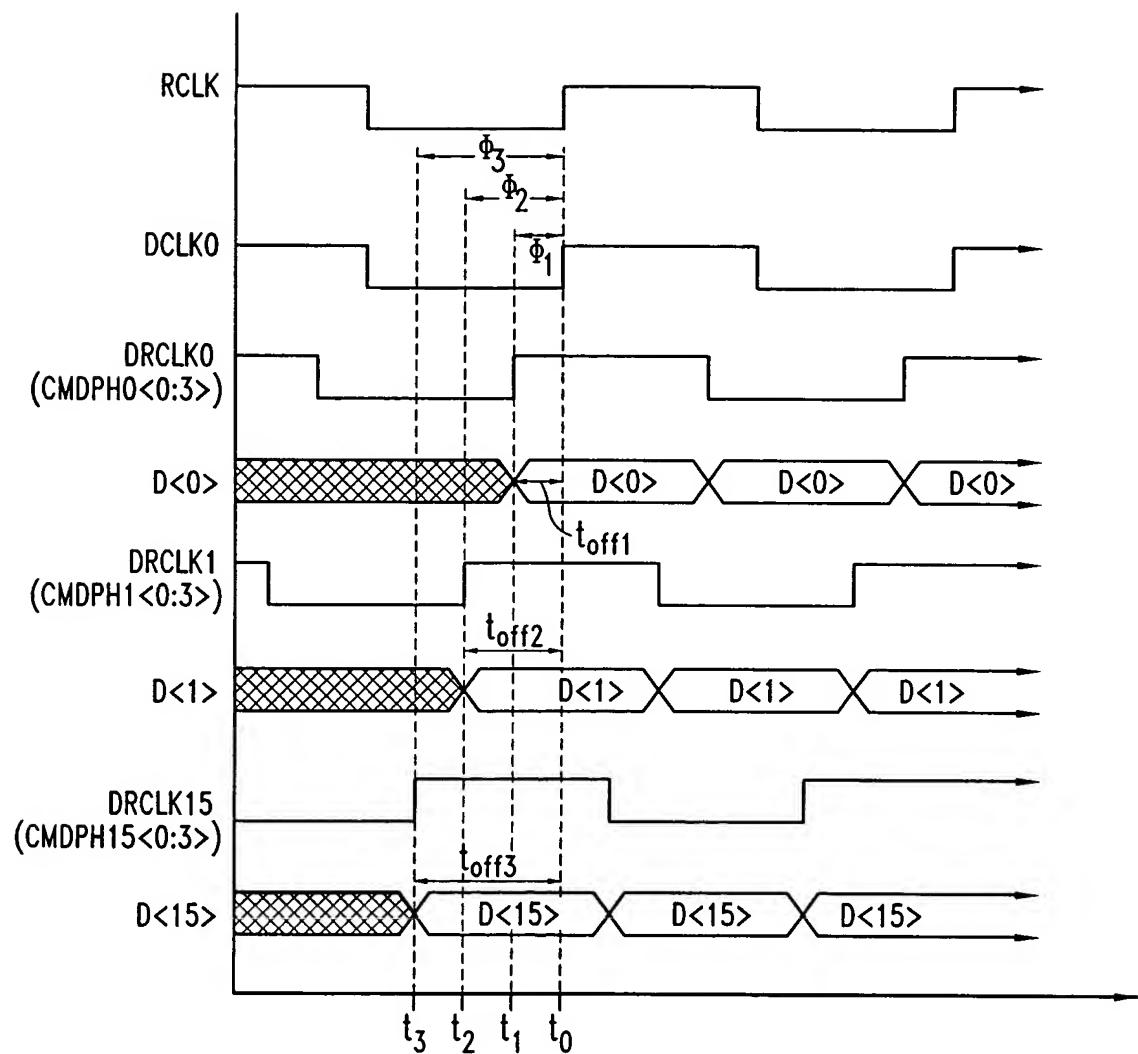


Fig. 6

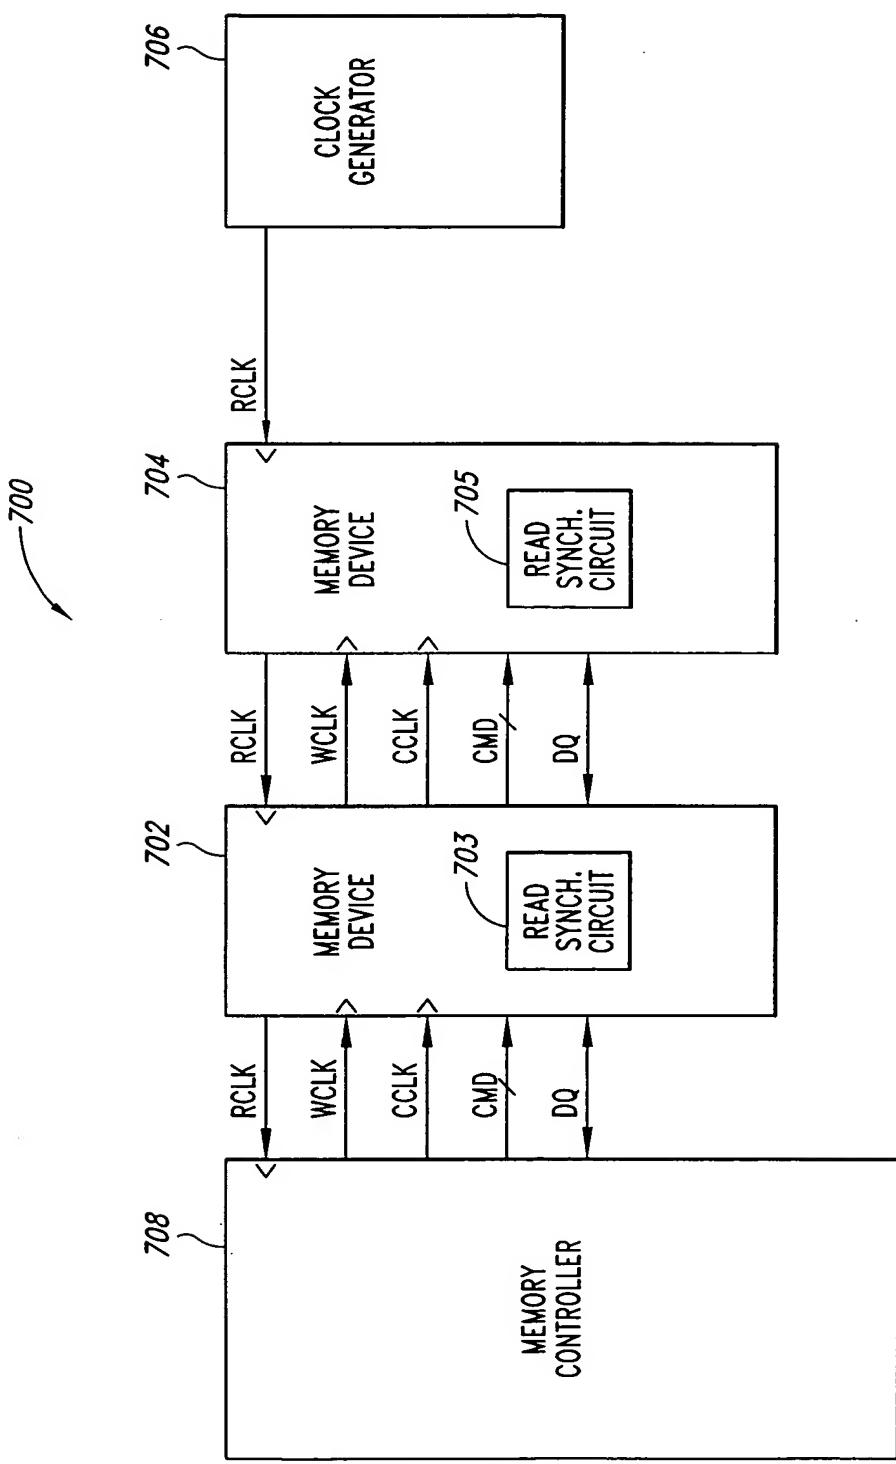


Fig. 7